



Unplug after the tuning is complete.



Unplug this after the tuning is complete.

Unplugging the EGR cooler

If you are doing emissions off tuning for your truck but are leaving the EGR cooler in place, unplug these connectors to not have warning codes

6.6L Duramax 11-16 EGR Plugs to be undone

Step One: The only plug that needs to be done on the duramax is located on the passenger side of the engine down by the alternator.

