

6.7L Cummins EGR Plugs to be undone

Step One: On the drivers side of the engine locate these plugs in front of the brake fluid reservoir



Step Two: This plug on the EGR servo on the by valve cover



Step Three: On the back of the throttle valve pointing towards the engine block is the final plug that needs to be undone

