

FUSE REMOVAL

Remove fuses corresponding to your vehicle year specified below;

Year	Engine	Pull Fuse	Pull Fuse	Pull Fuse	Pull Fuse	LOCATION
2001	LB7	SEO-1	SEO-2			CAB
2002	LB7	SEO-1	SEO-2			CAB
2003	LB7	TBC BATT	TBC IGNITION	INFO	RADIO	HOOD
2004	LB7	TBC BATT	TBC IGNITION	INFO	RADIO	HOOD
2004.5	LLY	TBC BATT	TBC IGNITION	INFO	RADIO	HOOD
2005	LLY	TBC BATT	TBC IGNITION	INFO	RADIO	HOOD
2006	LLY2	**INFO	**RADIO			HOOD
2006.5	LBZ	**INFO	**RADIO			HOOD
2007	LBZ	**INFO	**RADIO			HOOD
2007.5	LMM	INFO (TMNT)	RDO	IPC		CAB/HOOD
2008	LMM	INFO TMNT	RDO	IPC		CAB/HOOD
2009	LMM	INFO TMNT	RDO	IPC		CAB/HOOD
2010	LMM	INFO TMNT	RDO	IPC		CAB/HOOD

***Note:**

The INFO TMNT fuse can be found by opening the driver's side door and removing the side panel or will be in the fuse box under the hood.

All other fuses are located in the fuse box under the hood
(Be sure not to confuse the RDO fuse with the RDO AMP fuse!)